

# **User Guide**

**6-Port Gigabit+2GE+2G SFP High PoE Switch**

**2GE(90W bt)+4GE(30W)+2GE+2G SFP**

**Package Contents**

## Check the following contents of your package:

- PoE Switch x 1
- User Guide x1
- Power Cord x1
- Accessories(Rubber Feet\*4)

If any part is lost and damaged, please contact your local agent immediately.

## Introduction


6Port Gigabit+2GE+2G SFP High PoE Switch is 8-Port 10/100/1000 Mbps auto-negotiation RJ45 Port and 2-port gigabit SFP Slots. port1-6 is PSE port, port1-2 support IEEE802.3bt standard output(90W.max) this conforms to IEEE802.3af/at/bt standard.and each RJ45 port supports MDI/MDIX automatic flip and wire speed forwarding functions.

This switch has Legacy bt, bt, UPoE three levels can be toggle switch. high-power power supply , which mainly solves the problems of high deployment cost, long construction period, unstable power supply, difficult operation and maintenance management, low safety factor caused by the power supply system that needs to be deployed separately for high-power terminal power supply.It can be widely used in the new and reconstruction scenes of weak current to meet the power supply demand of high-power terminal in monitoring, access control, information release, parking lot, DDC and other systems.

## Hardware Description

### Front Panel

The Front Panel Consists of Ethernet Ports. The LED indicators are also located on the panel.

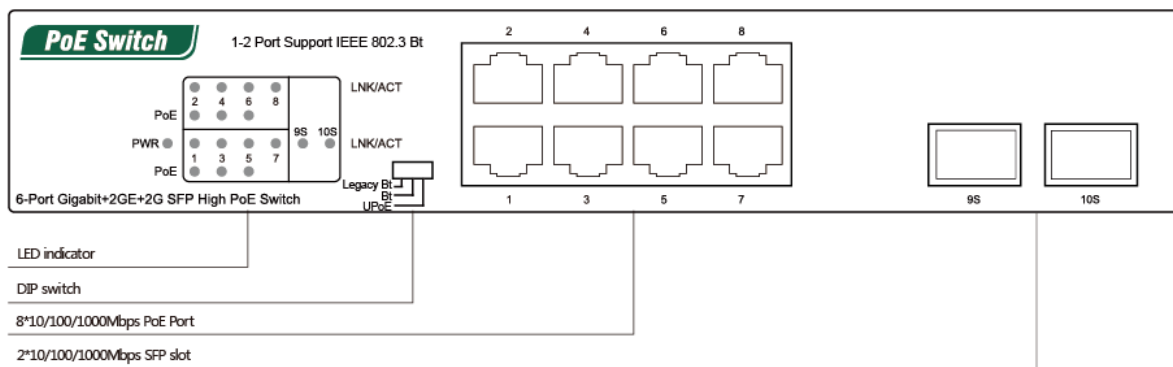

DIP Switch: control port 1-2 different power supply modes


Note: After change the mode,there is no need to restart manually to make the corresponding configuration take effect.

### LED indicator

LED	Color	Function
PWR	Green	Off: No Power supply. Light: Indicates the switch has power.
LNK/ACT	Green	Off: No device is connected to the corresponding port. Light: Indicates the link through that port is successfully Established at 10/100/1000Mbps. Blink: Indicates that the Switch is actively sending or Receiving data over that port.
PoE	Orange	Off: No PoE powered device (PD) connected. Light: There is a PoE PD connected to be port, which Supply power successfully. Blink: Indicates port abnormal power supply.

## Rear Panel

The rear panel of the PoE Switch indicates an AC inlet power socket, which accepts input power from 100 to 240V AC, 50/60HZ.

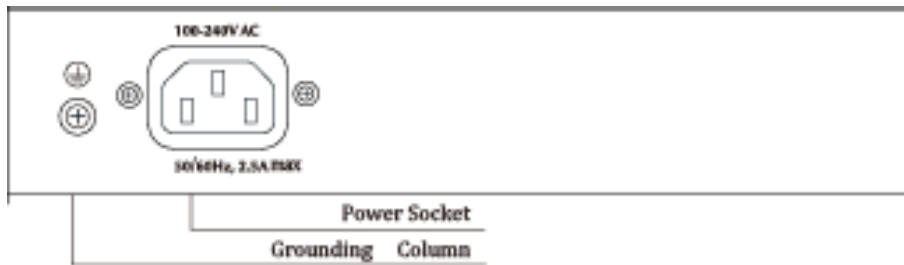

## Power socket

Connect the female connector of the power cord here, and the male connector to the AC(Alternating Current) power outlet. Please make sure the voltage of the power supply meets the requirement of the input voltage

## Grounding column

The switch already comes with lightning protection mechanism. You can also ground the switch through the PE (Protecting Earth) cable of AC cord or with Ground Cable.

## Installation the Switch


This part describes how to install your Ethernet Switch and make connections to it. Please follow the following instructions in avoid of incorrect installation causing device damage and security threat.

- Before cleaning the switch, unplug the power plug of the switch first. Do not clean the switch with wet cloth or liquid;
- Do not place the switch near water or any damp area. Prevent water or moisture from entering the switch chassis;
- Do not place the switch on an unstable case or desk. The switch might be damaged severely in case of a fall;

- Ensure proper ventilation of the equipment room and keep the ventilation vents of the switch free of obstruction;
- Make sure that the operating voltage is the same one labeled on the switch;
- Do not open the chassis while the switch is operating or when electrical hazards are present to avoid electrical shocks.

## Desktop Installation


Install the Switch on a desktop, please attach these cushioning rubber feet provided on the bottom at each corner of the Switch in case of the external vibration. Allow adequate space for ventilation between the device and the objects around it.

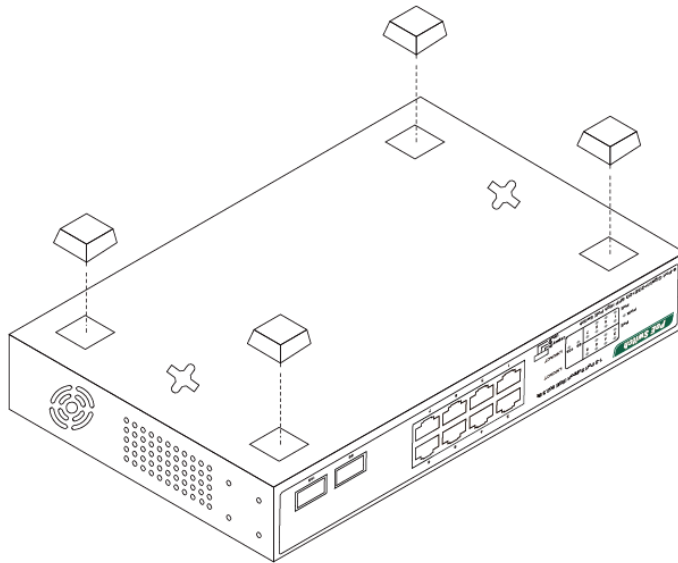

## Wall-mounted installation

In the first two fixed screw on the wall as shown in the figure below

Aim at the two fixed hole switches, and the machine smoothly on the screw

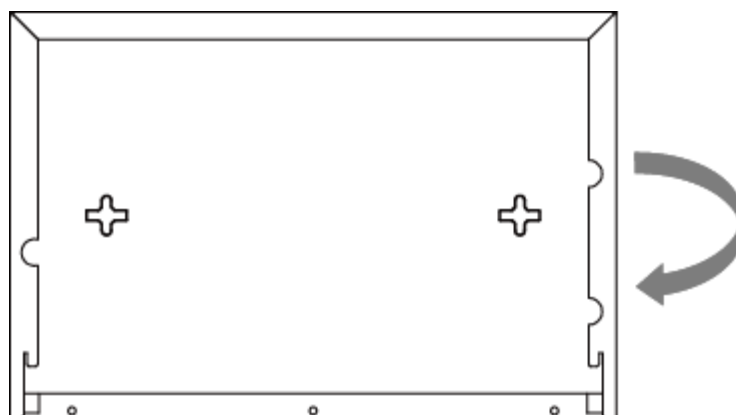

## Turn on the switch

Please connect the AC power cord into the rear of the switch and to an electrical outlet (preferably one that is grounded ).

When the switch is power on, the LED indicators flash momentarily for one second, which represents a resetting of the system. The Power LED indicator turns on green.

Note: Please confirm the voltage is correct before power on, otherwise the switch will be damaged.

(The power input is:100V-240Vac, 50/60Hz.)

## Specifications

Model	6-Port Gigabit+2GE+2G SFP
Standard	IEEE 802.3、 IEEE 802.3u、 IEEE 802.3ab 、 IEEE 802.3i、 IEEE 802.3x、 IEEE 802.3af 、 IEEE 802.3at 、 IEEE 802.3bt
Network Media	1000BASE-T: UTP category 5e cable (≤100m) 10BASE-T: UTP category 3,4,5 cable (≤100m) 100BASE-TX: UTP category 5 cable (≤100m)
MAC Address Table	4K, Auto-learning, Auto-aging
Transfer mode	Store-and-Forward
Frame Forward Rate	10Base-T: 14881pps/Port 100Base-TX: 148810pps/Port 1000Base-T/X: 1488095pps/Port
Switching Capacity	20G
Dimensions (L*W*H)	220 *150*44mm
Fan	Fan
Power Input	AC: 100~240V, 50/60Hz
PoE Port	Port1~6
PoE Power Budget	180W
Temperature	Operating Temperature: 0°C ~ 40 °C (32 °F ~104°F ) Storage Temperature: -40 °C ~ 70 °C (-40 °F ~158°F )
Humidity	Operating Humidity: 10% ~ 90% non-condensing Storage Humidity: 5% ~ 90% non-condensing

**Note:** all other trademarks or registered trademarks mentioned in this document are owned by their respective owners!