# **User Guide**

24-Port Gigabit+2G Combo+2G SFP Managed Switch

## **Package Contents**

#### Check the following contents of your package:

Switch \*1

User Manual \*1

Power Cord \*1

Mounting Accessories (Rack Mount Kit\*2; Feet \*4; Screw \*8)

If damage or shortage of found objects, please contact local dealers.

### 1. Product Description


Thank you for purchasing this Managed Switch.

24-Port Gigabit+2G Combo+2SFP provides rich 2-layer Managed functions with excellent performance and friendly management interface, which can fully meet users' needs, including system configuration, port configuration, MAC binding, MAC filtering, VLAN configuration, SNMP configuration, ACL configuration, QOS configuration, IP basic configuration, AAA configuration, MSTP configuration, IGMP SNOOPING configuration, GMRP configuration, EAPS configuration, RMON configuration, cluster management, ONVIF configuration, ERPS configuration, log management, etc.

### 2. Appearance Description

### 2.1 The front panel

The 24-Port Gigabit+2G Combo+2G SFP by 24\*10/100/1000Mbps and 2\*1000Mbps Combo and 2\*1000Mbps SFP, one Console port, a reset switch, and a related indicator, as shown below:

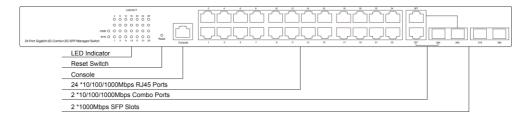


#### 2.2 LED indicator light

LED	Color	Description
PWR	Green	Death: switch does not power on
		Permanent: the switch is powered on
System	Green	Blinking: the system works
		Out: the system is starting or has no power
LNK/ACT	Green	Death: not connected to the network equipment
		Green light: connected to 10/1001000Mbps devices
		Blinking: connected devices are data transmission

#### 2.3 Back panel

Back panel: The 24-Port Gigabit+2G Combo+2G SFP Switch have AC power connector, AC input range 100-240V, 50/60HZ, a grounding screw holes, as shown below:

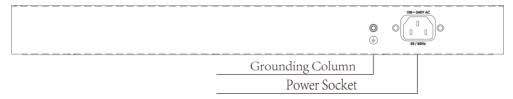

**Note**: This device relies on the separate protective earthing terminal. The device installation shall be permanently connected to building earth by a skilled person.

The device shall be intended to be used in a location having equipotential bonding (such as a telecommunication centre, a dedicated computer room, or a restricted access area).

#### Power socket

Connect the female connector of the power cord here, and the male connector to the AC (Alternating Current) power outlet. Please make sure the voltage of the power supply meets the requirement of the input voltage.

### 3. Installation of Equipment

#### 3.1 Announcements

To prevent equipment damage and personal injury caused by improper use, please observe the following precautions:

Before cleaning switch should switch power supply plug pulled out. Do not use wet cloth to wipe the switch, do not use liquid to clean the switch;

Do not switch on the water or wet places, and prevent water or moisture from entering the switch chassis;

Do not place the switch box in unstable or table, in case of fall, will cause serious damage to the switch;

Should maintain good indoor ventilation and keep the ventilation holes of the switch open;

Switch to the proper voltage to work properly, make sure the switch working voltage matches the voltage indicated;


To avoid the danger of electric shock, do not open the chassis without authorization; If any fault occurs, contact professional maintenance personnel.

#### 3.2 Desktop installation

Placed the bottom of the switch on large enough and stable desktop;


Tear off pad surface of the paste that comes with random paper; paste the pad to switch the Groove at the bottom of the housing to prevent external vibrations;

Resetting the switch on the Workbench cautiously.

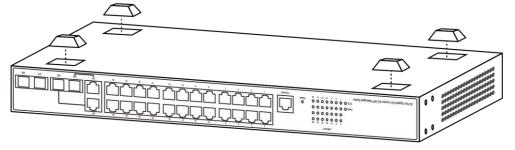

#### 3.3 Rack Installation

Check EIA-19inch machine Cabinet of grounding and stability, first, with screws will installation hanging ear fixed in switch front Panel sides will switch placed in machine Cabinet of a bracket, along machine Cabinet guide slot Mobile switch to right location, then, with screws will installation hanging ear fixed in machine Cabinet ends of fixed guide slot, ensure switch stable to installation in machine Cabinet slot bit of bracket. Equipment mounting brackets are not used for load-bearing, it only plays the regular role. When installing the equipment cabinet, box bottom bracket (fixed on the Cabinet) to support the device.

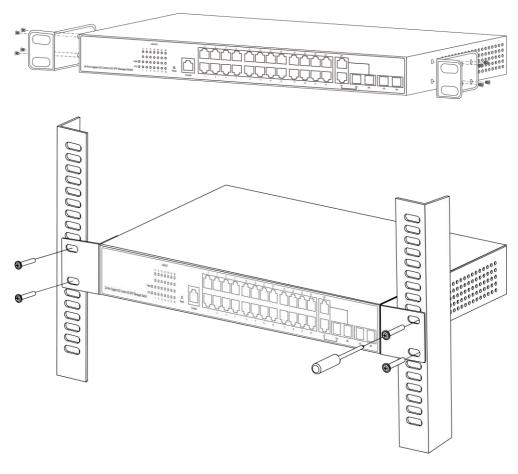

#### 3.4 Turn on Switch

Please connect the AC power cord into the rear of the switch and to an electrical outlet (preferably one that is grounded). When the switch is power on, the LED indicators flash momentarily for one second, which represents a resetting of the system. The Power LED indicator turns on green.

**Note:** Please confirm the voltage is correct before power on, otherwise the switch will be damaged. (The power input is: 100V-240Vac, 50/60Hz.)

### **Specifications**

Model	24-Port Gigabit+2G Combo+2G SFP	
Standard	IEEE 802.3, IEEE 802.3u, IEEE 802.3ab, IEEE 802.3z, IEEE 802.3x, IEEE 802.1X, IEEE 802.1q, IEEE 802.1p, IEEE 802.1d, IEEE 802.1w, IEEE 802.3ad	
Network Media	10BASE-T: UTP category 3,4,5 cable (≤100m) 100BASE-TX: UTP category 5 cable (≤100m) 1000BASE-T: UTP category 5e,6 cable (≤100m) 1000Base-X: MMF or SMF SFP Module (optional)	
MAC Address Table	8K, Auto-learning, Auto-update	
Jumbo Frame	9216Bytes	
Transfer mode	Store-and-Forward	
Frame Forward Rate	10Base-T: 14881pps/port 100Base-T: 148810pps/ port 1000Base-T: 1488095pps/ port	
Packet Forward Speed	41.66Mpps	
Switching Capacity	56Gbps	
Dimensions (L*W*H)	440.5*208*44mm	
Fan	Fanless	
Power Input	AC: 100-240V,50/60Hz	
Operating Temperature	0° C~40 ° C	
Storage Temperature	-40 ° C ~ 70 ° C	
Operating Humidity	10% ~ 90% non-condensing	
Storage Humidity	5% ~ 90% non-condensing	