

User Guide


4 *2.5GE+2*10G SFP+ Unmanaged Switch

This document applies to the 4 *2.5GE+2*10G SFP+ Unmanaged Switch. The 4 *2.5GE+2*10G SFP+ is used as an example in the product figure unless otherwise specified.

Packing List

When using the Switch for the first time, carefully open the packing box. The packing box should contain the following items:

- Switch *1
- User Manual *1
- Power cord*1 (built-in power version)
- power adapter *1(external power supply version)
- Accessories(Feet *4)

 **Note:** Precision devices are built in the device, please handle them carefully to avoid violent vibration, which may affect the performance of the device. If you find that the equipment is damaged or any parts are lost in the process of transportation, please inform us, we will give you a proper solution as soon as possible.

Chapter 1 Product Introduction

1.1 Product Overview

4*2.5GE+2*10G SFP+ Switch is our self-developed Unmanaged Switch product, which provides 4*10M/100M/1000M/2.5Gbps adaptive RJ45 ports and 2*1000M/2.5G/10Gbps SFP+ fiber module expansion slot to flexibly expand your network. Each RJ45 port supports MDI/MDIX auto-flip and wire-speed forwarding functions. Adopt store-and-forward technology to ensure effective bandwidth allocation to each port, powerful and flexible enough for users to deploy wireless access points or IP-based network surveillance cameras, widely used in SMEs, hotels and campus network convergence, core and other application scenarios.

Chapter 2 Product Appearance Description

2.1 Front Panel

The front panel consists of 4*10M/100M/1000M/2.5Gbps adaptive RJ45 ports and 2*1000M/2.5G/10Gbps SFP+ slots and related indicators, as shown in the following figure:

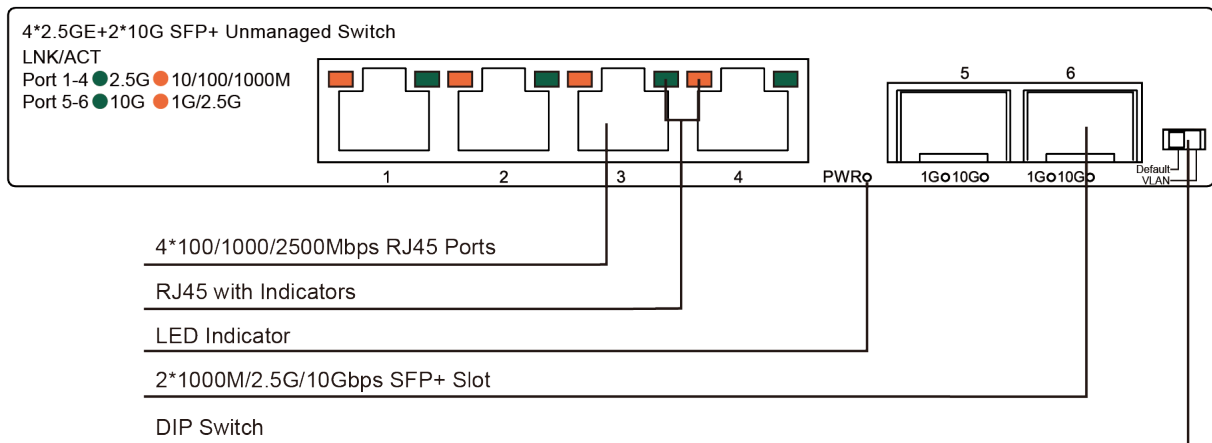


Figure 2-1 Switch front panel diagram

Ports description:

➤ 10M/100M/1000M/2.5Gbps RJ45 Ports

Support 10Mbps, 100Mbps, 1000Mbps and 2.5Gbps rate adaptive function, support auto-flip (Auto-MDI/MDIX) function, and two indicators on ports 1-4, as shown on the panel above.

➤ 1000M/2.5Gbps/10Gbps SFP+ Slot

SFP+ port is located on the right side of the panel, it is an independent 10 Gigabit fiber module slot, need to use 10 Gigabit optical modules, support SR/LR/LRM/ER/ZR models, backward compatible with 1000Mbps, 2.5Gbps transmission rate, with 10Gbps, 1000Mbps indicator below the port, that is, the two indicators below the 5-6 ports shown in the panel above.

➤ DIP Switch

Default: Factory default mode, normal communication between ports 1~6;

VLAN: In isolation mode, ports 1~4 of the switch are isolated from each other. Port 1~4 can only communicate with port 5~6 to secure the network. In this mode, please connect ports 5~6 to the central switching device.

2.2 LED Indicator

The LED indicators of the Switch are shown in the following table. Users can monitor the work and running status of the Switch conveniently and quickly through the following indicators:

LED	Color	Function
PWR	Green	Off: No Power supply. Light: Indicates the Switch has power.
1-4 Port (LNK/ACT)	Green	Off: No network device connected Light: 2.5Gbps network device is connected. Blinking: Data is being transferred.
	Orange	Off: No network device connected Light: 10M/100M/1000Mbps network device is connected. Blinking: Data is being transferred.
5-6 Port (LNK/ACT)	Green	Off: No 10Gbps network devices connected. Light: Connected 10Gbps network devices. Blink: Data being transferred.
	Orange	Light: Connected 1000Mbps, 2.5Gbps network devices. Blink: Data being transferred.

2.3 Rear Panel

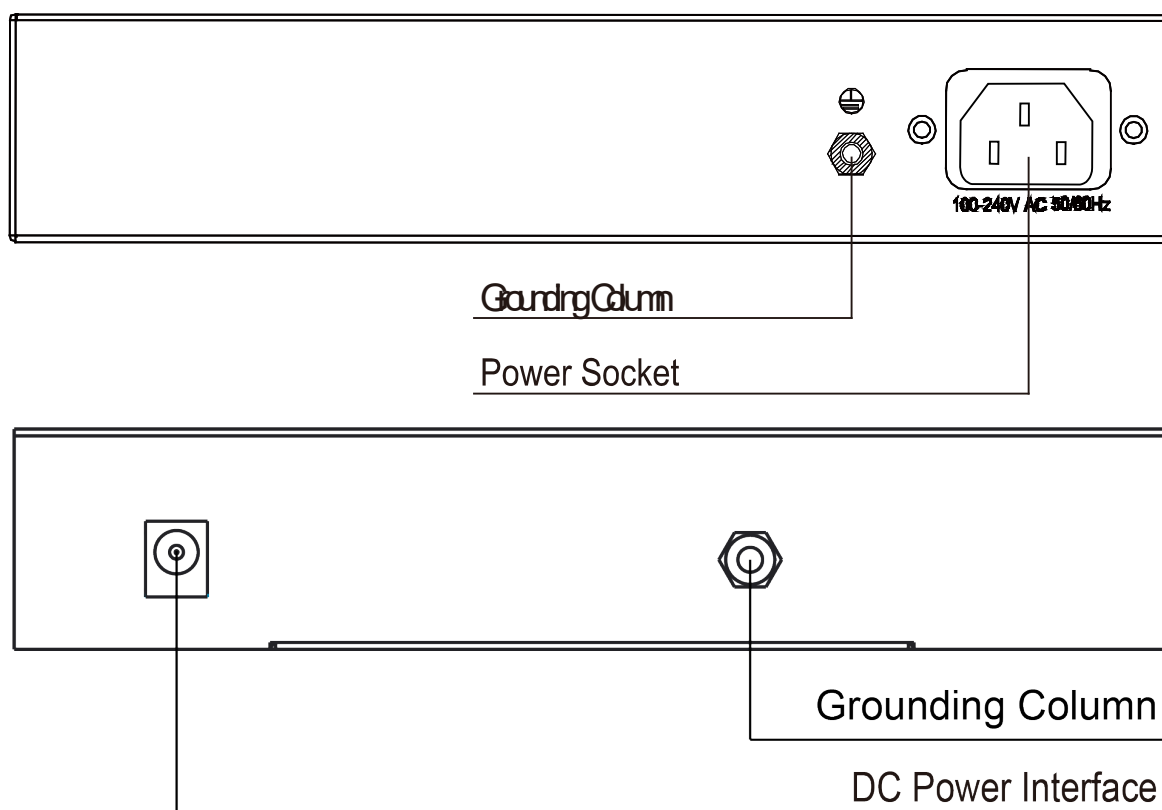


Figure 2-2 Diagram of the rear panel of the switch

AC power port

This is a DC power outlet, the negative plug of the power cord to this interface, the positive plug to the AC power.

DC power port

This is a DC power outlet, the negative plug of the power cord to this interface, the positive plug to the AC power.

Grounding Column

DC is located on the left side of the power connector and AC is located on the right side of the power connector, use a wire to ground it to protect it from lightning strikes.



Precautions: The product has provision for a permanently connected protective grounding conductor, this conductor need to install to building earth by a skilled person.

Chapter 3 Installation Guide

This chapter helps users correctly install and safely use Switches.

3.1 Installation Precautions



Precautions: To avoid equipment damage and personal injury, observe the following precautions:

- The Switch room should be dry and ventilated, free from corrosive gases and strong electromagnetic interference.
- The humidity of the Switch equipment room should be lower than 90%. Install proper devices when possible.
- The grounding of the Switch shall comply with the grounding requirements described in this manual, and shall be separately and well grounded.
- The Switch voltage should be stable to prevent abnormal operation of the Switch caused by power supply voltage mutation, fluctuation and other phenomena;
- Keep a proper distance between the Switch and other devices. Do not stack other devices with the Switch.
- The connection cable between the Switch and the distribution frame should be standardized and reasonable, and the distribution frame (box) jumper wire should be concise and clear to prevent the phenomenon of parallel lines and wires;
- To avoid the danger of electric shock, do not open the chassis without authorization; If any fault occurs, contact professional maintenance personnel.



Safety Tips:

- Use a three-hole socket with safe grounding, and ensure that the PGND cable of the power socket is properly grounded.
- Ensure sufficient space for heat dissipation and ventilation of the Switch. Do not place heavy objects on the Switch.

3.2 Installation Environment

Before installation, make sure that the proper working environment is available, including power requirements, adequate space, proximity to other equipment to be connected, and other equipment in place. Please confirm the following installation requirements:

- Ensure the stability of the workbench and good grounding;
- Check whether cables and connectors required for installation are in place (less than 100m).
- Environment requirements: The operating temperature ranges from 0°C to 40°C and the relative humidity ranges from 5% to 90%.

3.3 Installation

Desktop installation

- Place the bottom of the Switch face up on a large enough stable desktop;
- Tear off the attached sticky paper on the surface of the footpad and paste the footpad into the groove at the bottom of the chassis of the Switch to prevent external vibration;
- Carefully position the Switch upright on the workbench;

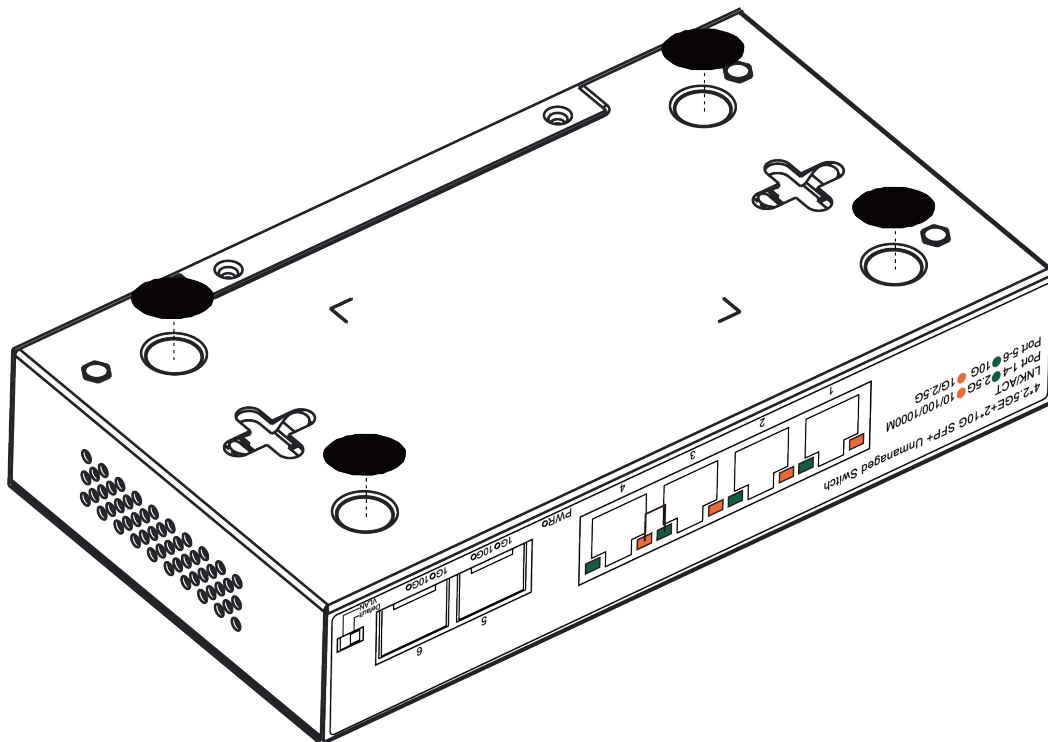


Figure 3-1 Desktop Installation Diagram

Rack mounted

Install the Switch by following the steps:

- Fix two screws on the wall first, with the spacing between the screws matching the spacing between the two fixing holes of the Switch.
- Align the two fixing holes of the switch and hang the machine smoothly on the screws.

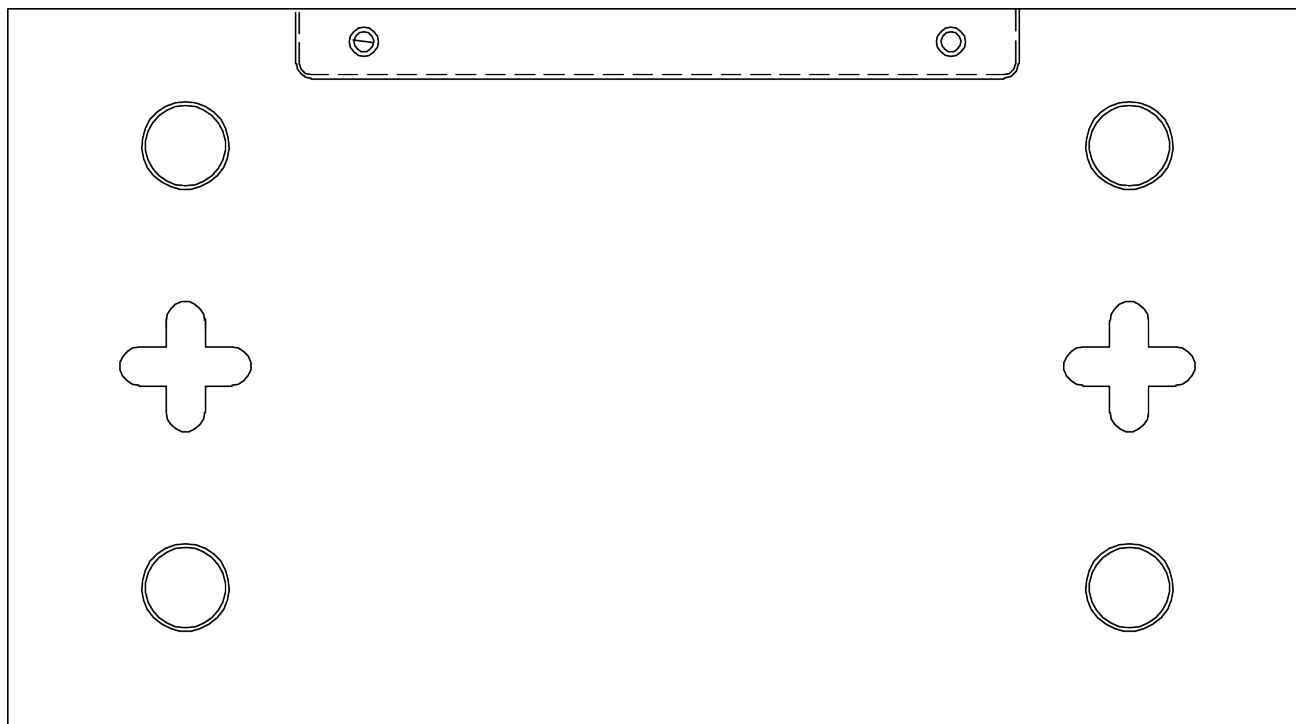


Figure 3-2 Diagram 1 of rack installation

3.4 Enabling the Switch

Connect the power cord, plug in, and turn on the power. After the Switch is started, the Switch automatically initializes. If all port indicators are on and off, the system is successfully reset. The power LED indicator is steady on.

Note: Before powering on the device, ensure that the voltage is correct; otherwise, the device may be damaged.

Appendix: Technical Specifications

Model	4 *2.5GE+2*10G SFP+ Unmanaged Switch (AC)	4 *2.5GE+2*10G SFP+ Unmanaged Switch (DC)
Standard	IEEE802.3, IEEE2.3i, IEEE802.3u, IEEE802.3ab, IEEE802.3bz, IEEE802.3ae, IEEE802.3x, IEEE802.1bz	
Network Media(Cable)	10BASE-TX: UTP category 3,4,5 cable(≤100m) 100BASE-TX: UTP category 5, 5e cable(≤100m) 1000BASE-TX: UTP category 5e, 6 cable(≤100m) 2.5GBASE-TX: UTP category 6, 6A cable(≤100m) 1000BASE-X: MMF, SMF 10GBASE-X: MMF, SMF 10GBASE-SR: OM3/OM4 or above MMF (2m~300m) 10GBASE-LR: IEC's B1.1 and B1.3 SMF (2m~1000m)	
MAC Address Table	4K, Auto-learning, Auto-updating	
Jumbo Frames	12KByte	
Packet Buffer	8Mbit	
Transfer Mode	Store-and-Forward	
Packet Forward Speed	44.64Mpps	
Switching Capacity	60Gbps	
Dimensions (L*W*H)	168*94*32mm, Black	
Power supply	Built-in power AC 100-240V 50-60Hz	External Adapter DC 12V/1A
Operating Temperature	0°C ~ 40 °C	
Storage Temperature	-40 °C ~70°C	
Operating Humidity	10% ~ 90% non-condensing	
Storage Humidity	5% ~ 90% non-condensing	