

# User Guide

---


## **48GE+6\*10G SFP+ Unmanaged Switch**

This document applies to the 48GE+6\*10G SFP+ Unmanaged Switch. The 48GE+6\*10G SFP+ is used as an example in the product figure unless otherwise specified.

## Packing List

When using the Switch for the first time, carefully open the packing box. The packing box should contain the following items:

- Switch \*1
- User Manual \*1
- Power Cord \*1
- Accessories(Rack Mount Kit \*2,Feet \*4,Screw \*8)

 **Note:** Precision devices are built in the device, please handle them carefully to avoid violent vibration, which may affect the performance of the device. If you find that the equipment is damaged or any parts are lost in the process of transportation, please inform us, we will give you a proper solution as soon as possible.

## Chapter 1 Product Introduction

### 1.1 Product Overview

48GE+6\*10G SFP+ is our self-developed 10G Uplink Unmanaged Switch with 48\*10/100/1000Mbps RJ45 ports and 6\*10Gbps SFP+ fiber modules. All RJ45 ports support wire-speed forwarding and auto-flip function, using store-and-forward technology, combined with dynamic memory allocation to ensure effective bandwidth allocation to each port, easy to manage and maintain, to meet the networking and access requirements of enterprises, communities, hotels, office networks and campus networks.

## Chapter 2 Product Appearance Description

### 2.1 Front Panel

The front panel consists of 48\*10/100/1000Mbps adaptive RJ45 ports, 6\*10Gbps SFP+ slots and related indicators, as shown in the following figure:

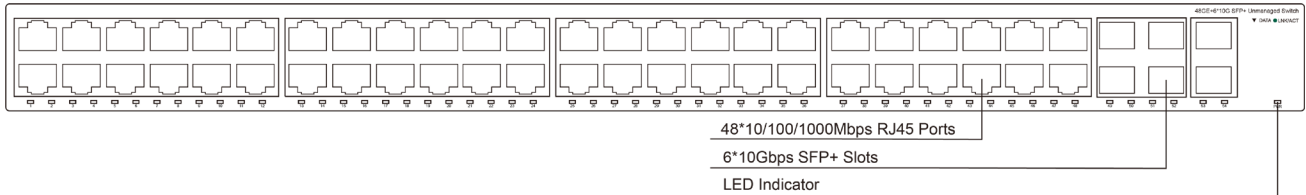


Figure 2-1 Switch front panel diagram

Port description:

#### ➤ 10/100/1000Mbps RJ45 Ports

Supports 10Mbps, 100Mbps, or 1000Mbps rate adaptation, auto-MDI /MDIX, and each port has a corresponding indicator, that is, port indicators 1-48 as shown on the panel in the figure above .

#### ➤ 10Gbps SFP Slots

The SFP+ ports are located on the right side of the panel and require 10Gbps SFP+ 10GbE optical modules, supporting SR/LR/LRM/ER/ZR and other models. Each port has a corresponding indicator, i.e. 49-54 port indicators shown in the panel above .

### 2.2 LED Indicator

The LED indicators of the Switch are shown in the following table. Users can monitor the work and running status of the Switch conveniently and quickly through the following indicators:

LED	Color	Function
PWR	Green	Off: No Power supply. Light: Indicates the Switch has power.
DATA	Green	Off: The network is not connected. Steady on: A 10/100/1000Mbps network device is connected. Blinking: Data is being transferred.

## 2.3 Rear panel

The rear panel of a Switch shows the AC power port. The power input ranges from 100-240V AC at 50/60 Hz.

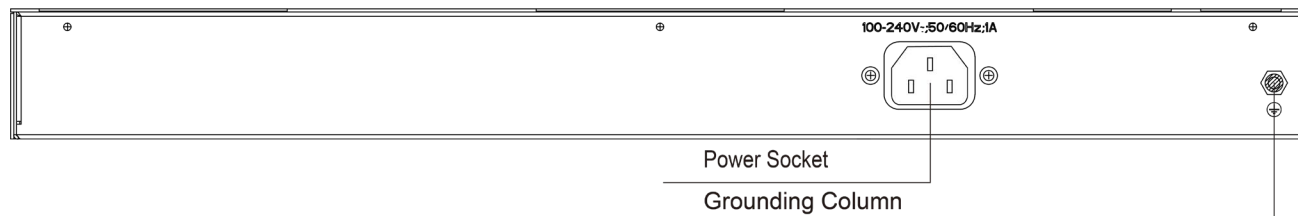


Figure 2-2 Diagram of the rear panel of the switch

### AC power port

This is an AC power socket, connect the negative plug of the power cord to this interface, and connect the positive plug to the AC power supply.

### Grounding Column

Located on the right side of the power connector, please use a wire to ground to prevent lightning strikes.



**Precautions:** The product has provision for a permanently connected protective grounding conductor, this conductor need to install to building earth by a skilled person.

## Chapter 3 Installation Guide

This chapter helps users correctly install and safely use Switches.

### 3.1 Installation Precautions



**Precautions:** To avoid equipment damage and personal injury, observe the following precautions:

- The Switch room should be dry and ventilated, free from corrosive gases and strong electromagnetic interference;
- The humidity of the Switch equipment room should be lower than 90%. Install proper devices when possible;
- The grounding of the Switch shall comply with the grounding requirements described in this manual, and shall be separately and well grounded;
- The Switch voltage should be stable to prevent abnormal operation of the Switch caused by power supply voltage mutation, fluctuation and other phenomena;
- Keep a proper distance between the Switch and other devices. Do not stack other devices with the Switch;
- The connection cable between the Switch and the distribution frame should be standardized and reasonable, and the distribution frame (box) jumper wire should be concise and clear to prevent the phenomenon of parallel lines and wires;
- To avoid the danger of electric shock, do not open the chassis without authorization; If any fault occurs, contact professional maintenance personnel.



**Safety Tips:**

- Use a three-hole socket with safe grounding, and ensure that the PGND cable of the power socket is properly grounded;
- Ensure sufficient space for heat dissipation and ventilation of the Switch. Do not place heavy objects on the Switch.

### 3.2 Installation Environment

Before installation, make sure that the proper working environment is available, including power requirements, adequate space, proximity to other equipment to be connected, and other equipment in place. Please confirm the following installation requirements:

- Ensure the stability of the workbench and good grounding;
- Check whether cables and connectors required for installation are in place (less than 100m);

- The product does not provide installation components. Prepare components of the selected installation type, such as screws, nuts, and tools, to ensure reliable installation;
- Environment requirements: The operating temperature ranges from 0°C to 40°C and the relative humidity ranges from 5% to 90%.

### 3.3 Installation

#### Desktop installation

- Place the bottom of the Switch face up on a large enough stable desktop;
- Tear off the attached sticky paper on the surface of the footpad and paste the footpad into the groove at the bottom of the chassis of the Switch to prevent external vibration;
- Carefully position the Switch upright on the workbench.

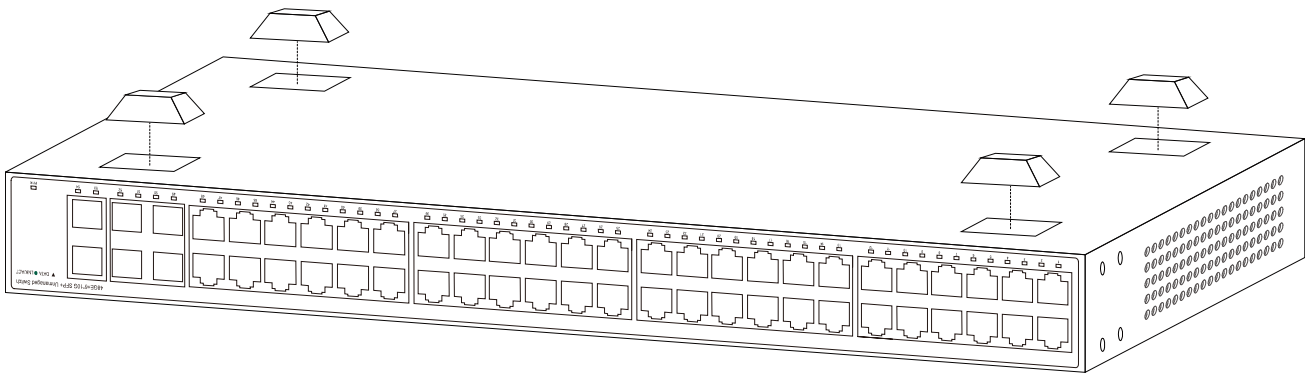


Figure 3-1 Desktop Installation Diagram

#### Rack mounted

- Check the grounding and stability of the EIA-19inch cabinet;
- Fix mounting ears to both sides of the front panel of the Switch using screws. Place the Switch on a bracket of the cabinet and move the Switch along the guide rails of the cabinet to a proper position;
- Use screws to fix mounting ears to the guide rails at both ends of the cabinet to ensure that the Switch is securely installed on the brackets in the cabinet slots. The mounting ear of the device is not used for weight bearing, it is only used for fixation;
- When installing devices in a cabinet, brackets (fixed on the cabinet) are provided below the device chassis to support devices.

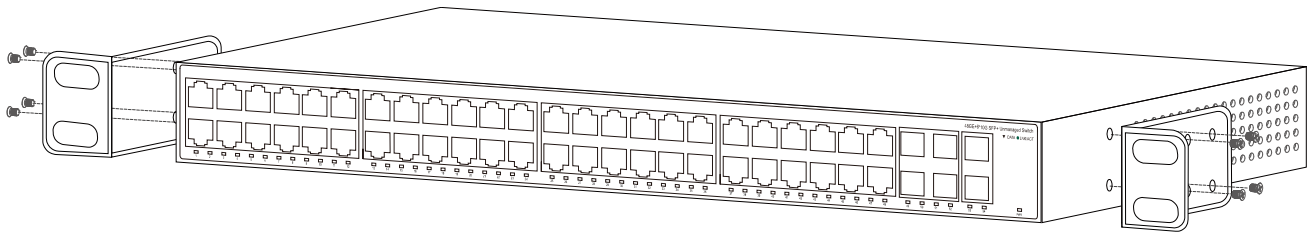


Figure 3-2 Diagram 1 of rack installation

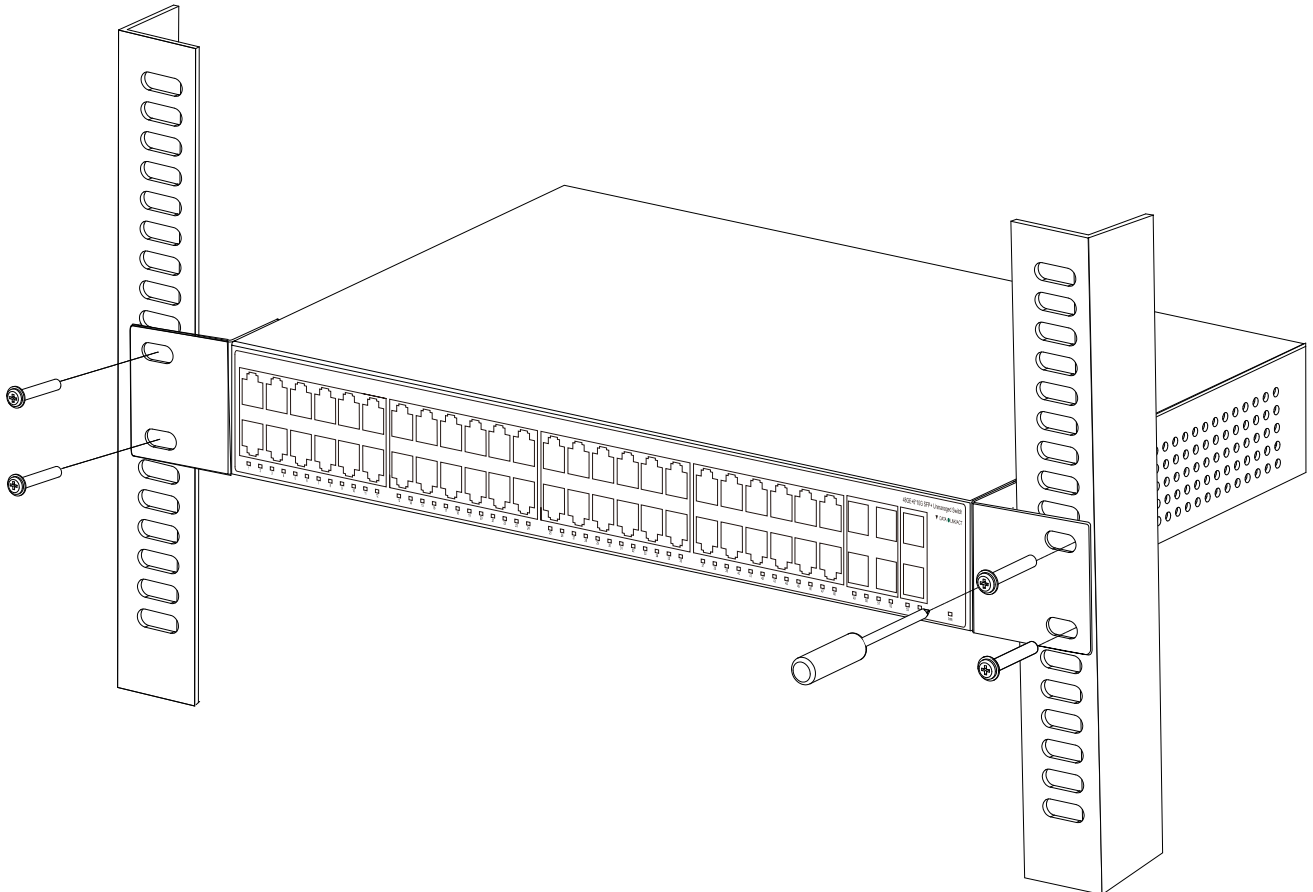


Figure 3-3 Diagram 2 of rack installation

### 3.4 Enabling the Switch

Connect the power cord, plug in, and turn on the power. After the Switch is started, the Switch automatically initializes. If all port indicators are on and off, the system is successfully reset. The power LED indicator is steady on.

**Note:** Before powering on the device, ensure that the voltage is correct; otherwise, the device may be damaged.  
(Power input range AC: 100-240V 50/60Hz)

## Appendix: Technical Specifications

Model	48GE+6*10G SFP+ Unmanaged Switch
Standard	IEEE802.3, IEEE802.3i, IEEE802.3u, IEEE802.3ab, IEEE802.3z, IEEE802.3x, IEEE802.3ae
Network Media(Cable)	10BASE-T: UTP category 3,4,5 cable( $\leq 100\text{m}$ ) 100BASE-TX: UTP category 5, 5e cable( $\leq 100\text{m}$ ) 1000BASE-TX: UTP category 5e, 6 cable( $\leq 100\text{m}$ ) 1000BASE-X: MMF, SMF 10GBASE-X: MMF, SMF 10GBASE-SR: OM1/OM2/OM3 or above MMF (2m~300m) 10GBASE-LR: IEC's B1.1 and B1.3 SMF (2m~10000m)
MAC Address Table	32K, Auto-learning, Auto-update
Packet Buffer	16Mbit
Jumbo Frames	12KBytes
Transfer Mode	Store-and-Forward
Switching Capacity	216Gbps
Packet Forward Speed	160.71Mpps
Power Supply	60W, 12V/5A, Built-in power
Input Voltage	AC 100-240V 50/60Hz, 2.0A Max
Dimensions (L*W*H)	440*260*44mm, Black
Fan	1pcs
Operating Temperature	0°C ~ 40°C
Storage Temperature	-40°C ~ 70°C
Operating Humidity	10% ~ 90% non-condensing
Storage Humidity	5% ~ 90% non-condensing